## **K-EVC**

- Remove the pump's handle and electric box
- Make a hole of diameter 16 on the electric box in correspondence with the supply cable and mount the fairlead
- Screw the valve brass body to the suction side of the pump using sealant L 542 on the thread
- Screw the hexagonal extension cable to the valve body using sealant L 542 on the thread
- Assemble the vacuum gauge on the valve body using sealant L 542
- Introduce the solenoid valve extension cable into the fairlead
- Remove the electrical connection of the electric motor supply from the switch
- Connect in parallel the solenoid valve supply with the cable of motor supply
- Connect the solenoid valve earth to the motor earth
- Remount the electric box
- Tighten the fairlead nut
- Remount the carrying handle